

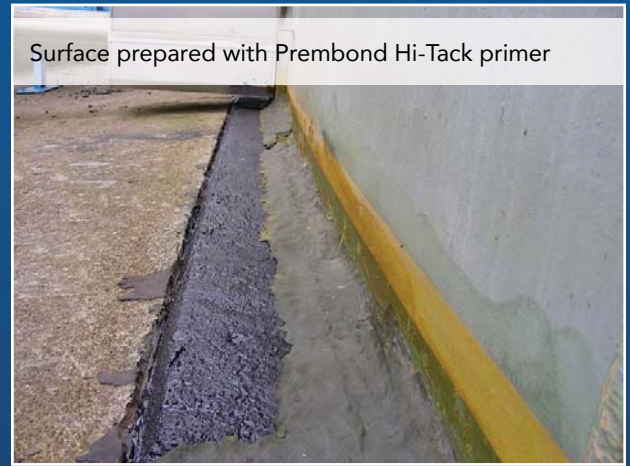


## Apply Premier Primer

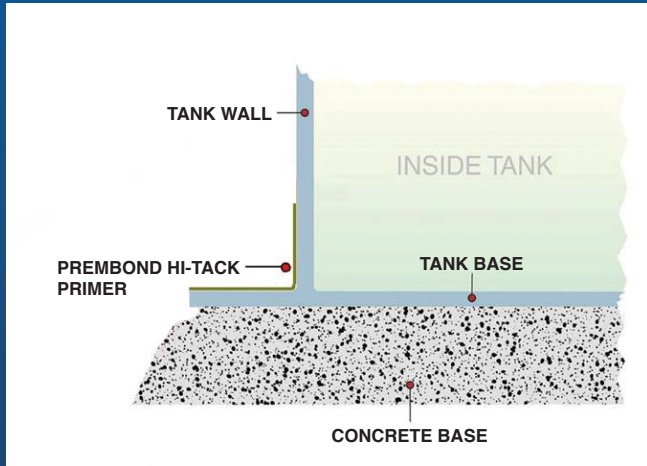

1. Prime the tank surface with Prembond Hi-Tack Primer.

## Apply Premier Mastic & Tapes

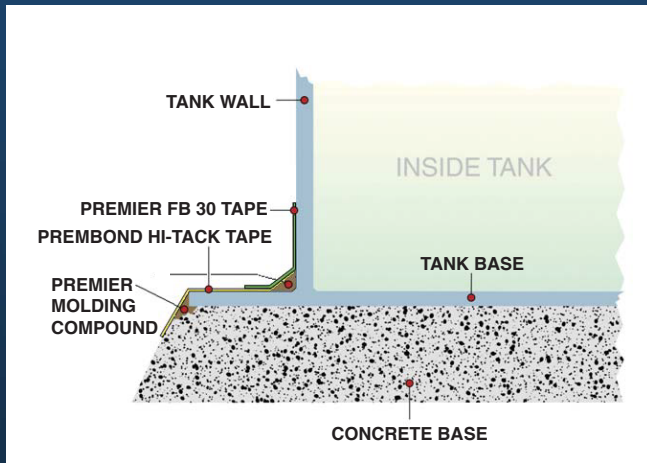


2. Apply Premier Molding Compound to fill all voids

4. Apply Premcote FB 30 Tape (Outer Tape)

3. Apply Prembond Hi-Tack Tape (Inner Tape)

## Apply Premier Topcoat

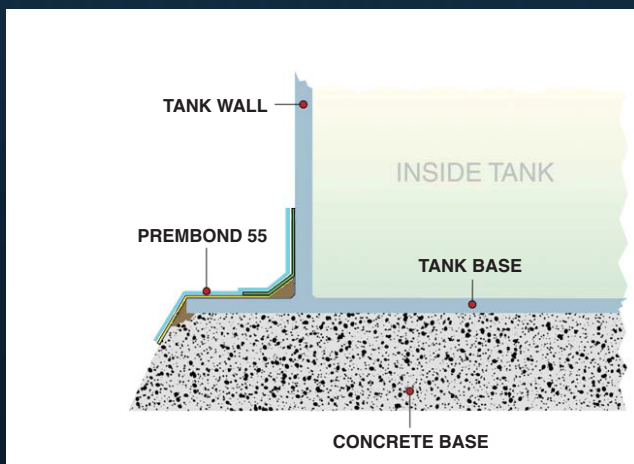

5. Apply Premier Prembond 55